



HOW-TO


Install #12 Metal Grommets

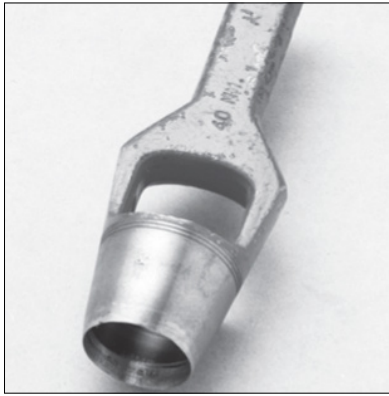

Manual Fabric Cutter

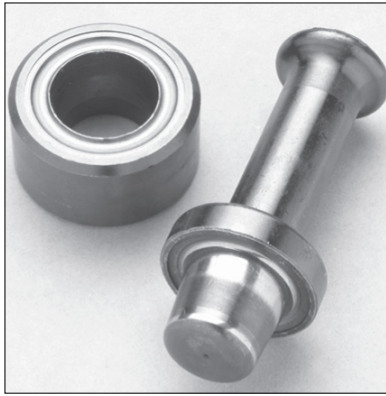

Die Set

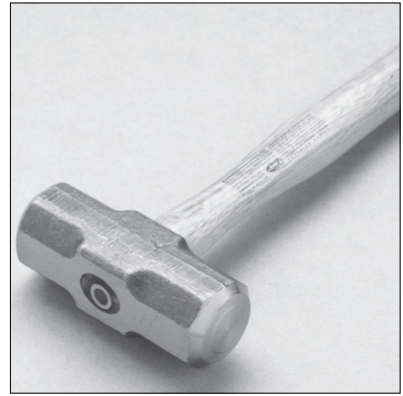

4 Pound Sledge Hammer

Grommet Installation



1. Calculate and mark the grommet locations according to your design specifications.



2. Pound fabric cutter with 4 lb sledge hammer to cut holes for grommets.


TIP. Always use a sturdy, dense surface such as MDF board.



3. Place male grommet on bottom die, face down.



4. Place pierced fabric over male grommet facing forward.

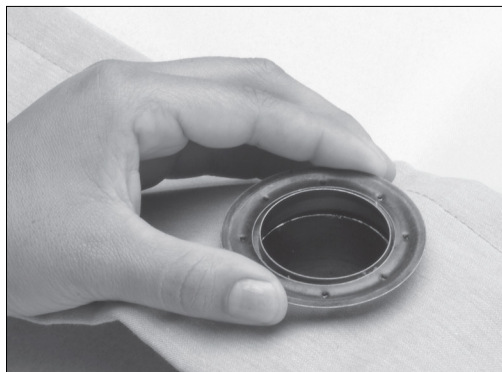

5. Place female grommet over fabric teeth down.



When installing grommets on lighter fabrics use DXG90012 Fabric Support Ring between female grommet and fabric.



HOW-TO

Install #12 Metal Grommets

Grommet Installation - continued



6. Place die set handle in position.



7. Hold die handle firmly and set grommet using the 4 lb sledge hammer.

TIP. You may have to hit the die several times to ensure the grommet is properly set.



It is highly recommended to install this product on a strong surface such as a concrete floor.